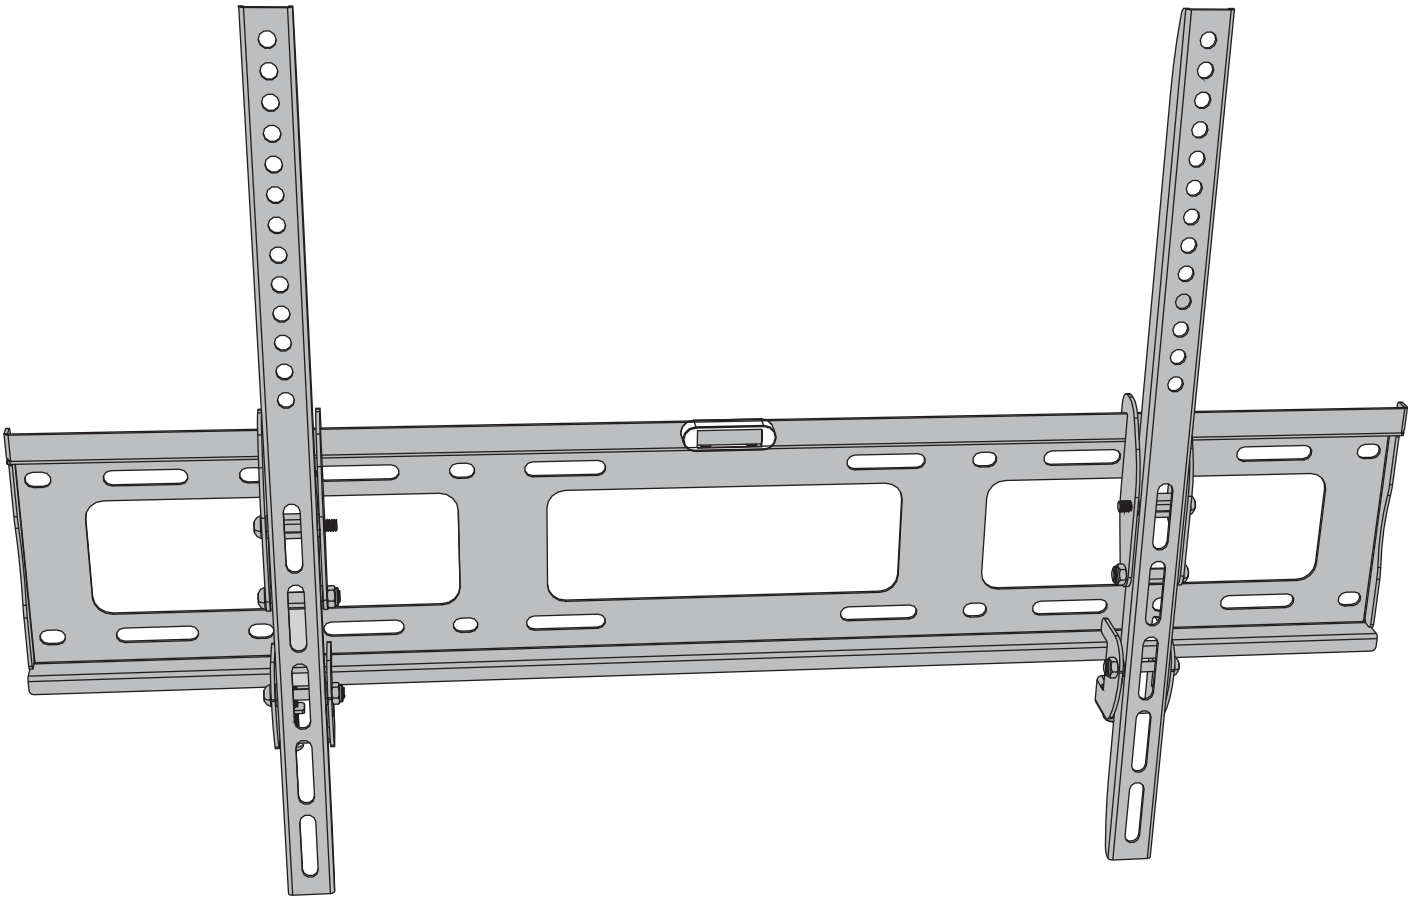

Installation Instructions

Ematic TV Wall Mount
EMW6101

Max Load: 110lbs (50 KG)
For 30”-70” Televisions

Component Checklist

TV Requirements:

Max Weight	TVS	VESA
110lbs	**30”-70”**	**700x400**

IMPORTANT: Verify all parts are included and undamaged before assembling. If any parts are missing or damaged, contact the seller for a replacement.

TV Brackets (x2)

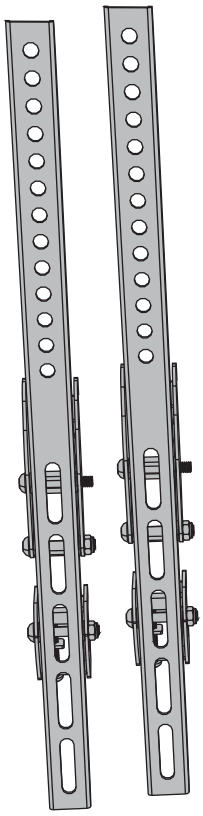

Wall Plate (x1)

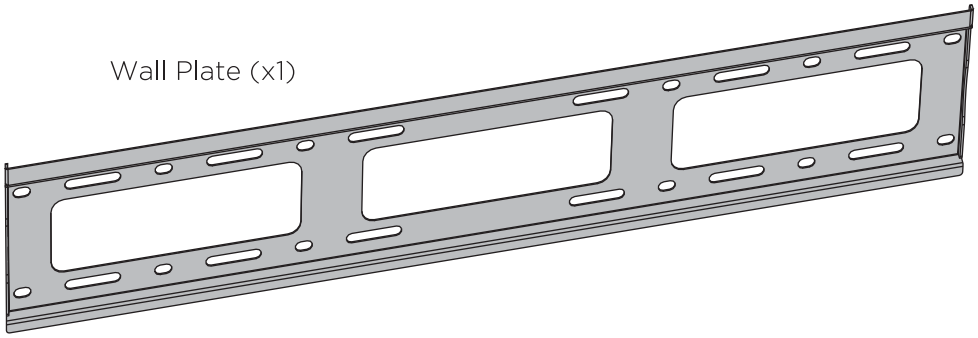

TV Screws

M5x16mm	M6x16mm	M8x16mm	M5x35mm	M6x35mm	M8x35mm
A (x4)	**B** (x4)	**C** (x4)	**D** (x4)	**E** (x4)	**F** (x4)

M8 Plastic Anchor	M8	Square Washer	Washer	Level	TV Spacer
G (x4)	**H** (x4)	**I** (x4)	**J1** (x4)	**J2** (x1)	**K** (x4)

Tools Required:

Marker

Screwdriver

Electric Drill

Tape Measure

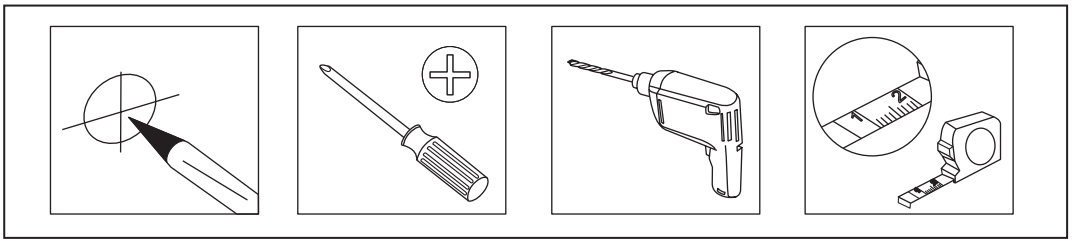

⚠ WARNING

Do not begin installation of the product before you have read and understood the instructions in this manual. Please contact your distributor if you have any questions regarding this product.

Concrete Installation for TV Wall Mount

STEP 1A: For Concrete Wall Mounting

1. Position Wall Plate level at desired height and use it to mark the hole locations as shown below.

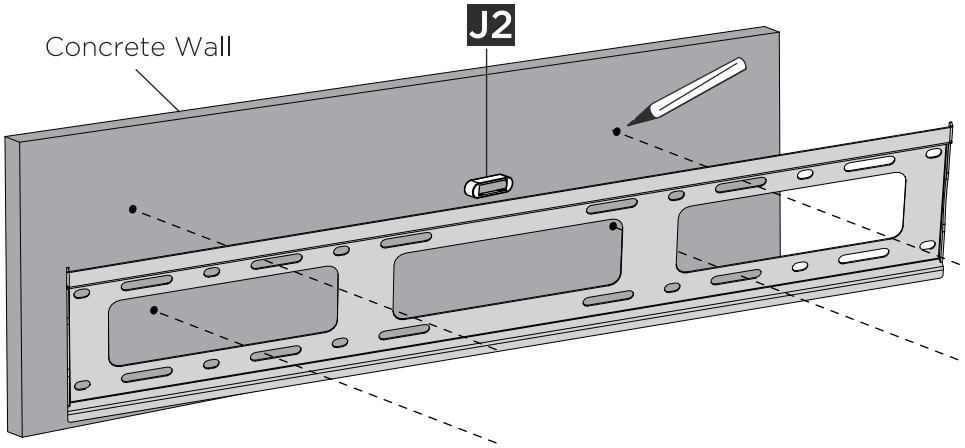

2. Drill the holes to at least 50 mm in depth.

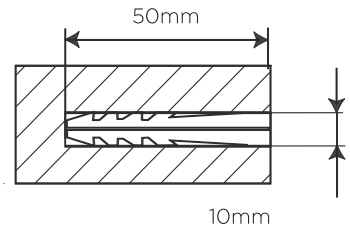

Do not drill into mortar joints.

3. Secure the TV mount to the wall using the concrete anchor, washer, and screw combination.

Parts Needed

M8 Plastic Anchor

G (x4)

M8

H (x4)

Washer

J1 (x4)

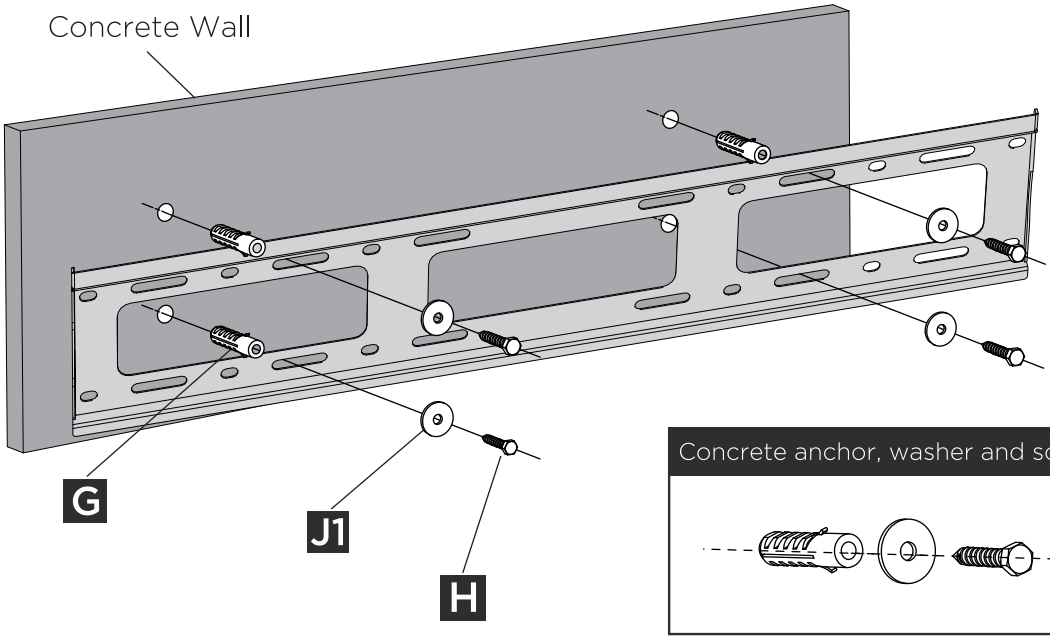

Concrete anchor, washer and screw

Wood Stud Installation for TV Wall Mount

STEP 1B: For Wood Stud Mounting

1. Use a stud finder to locate the edges of the studs.

Mark the center of each stud by drawing a vertical line with a pencil.

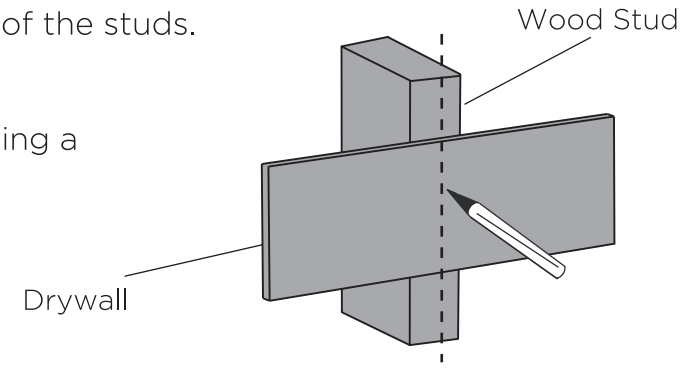

2. Place TV mount level at a desired height, and use the the pattern below as a template to mark the hole locations.

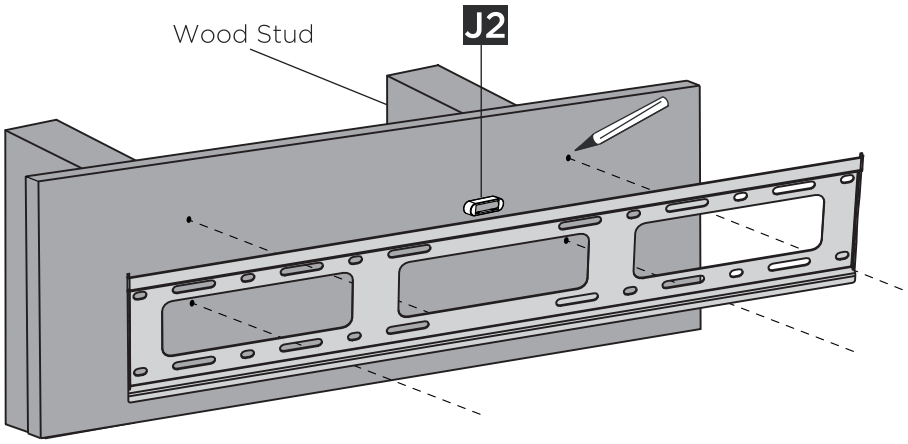

3. Drill the holes to at least 60 mm in depth.

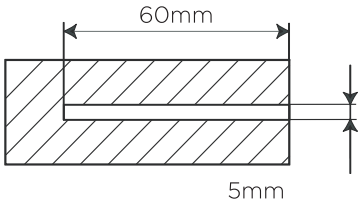

4. Secure the TV mount to the wall using the washer and screw combination.

Parts Needed

M8

H (x4)

Washer

J1 (x4)

Cover

J2 (x1)

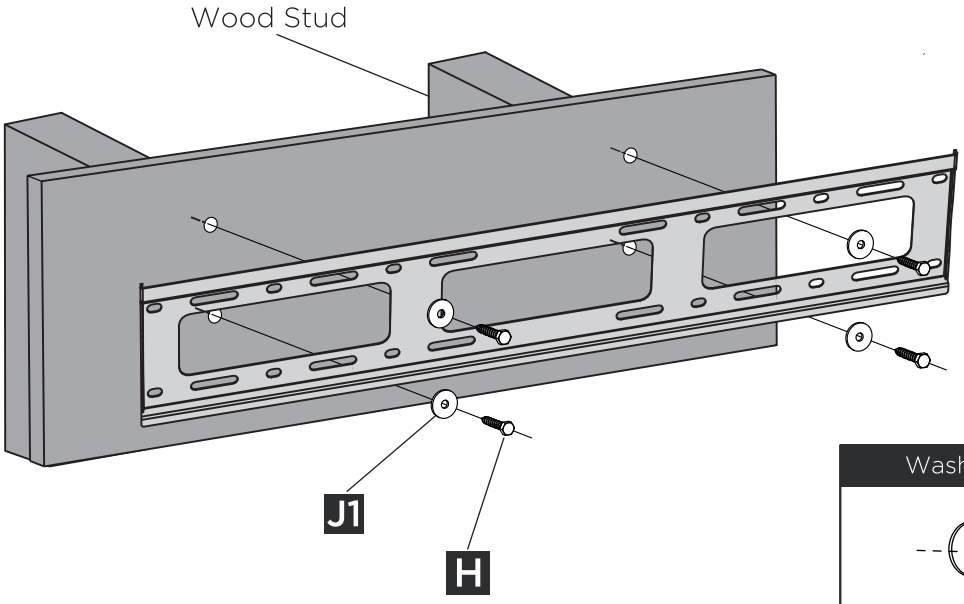

Washer and screw



Attach Brackets to TV with Flat Back

STEP 2A: For Televisions with a Flat Back

1. Determine which screw diameter to use by hand threading screws into the proper inserts on the back of your television. Verify that the screw is a good fit, not too short or too long.

Parts Needed						
Square Washer	Pick Best Fit for your TV	M5x16mm	OR	M6x16mm	OR	M8x16mm
I (x4)		**A** (x4)		**B** (x4)		**C** (x4)

---

2. Place TV brackets over your television hole pattern. Attach using appropriate screw and square washer combination for your TV.

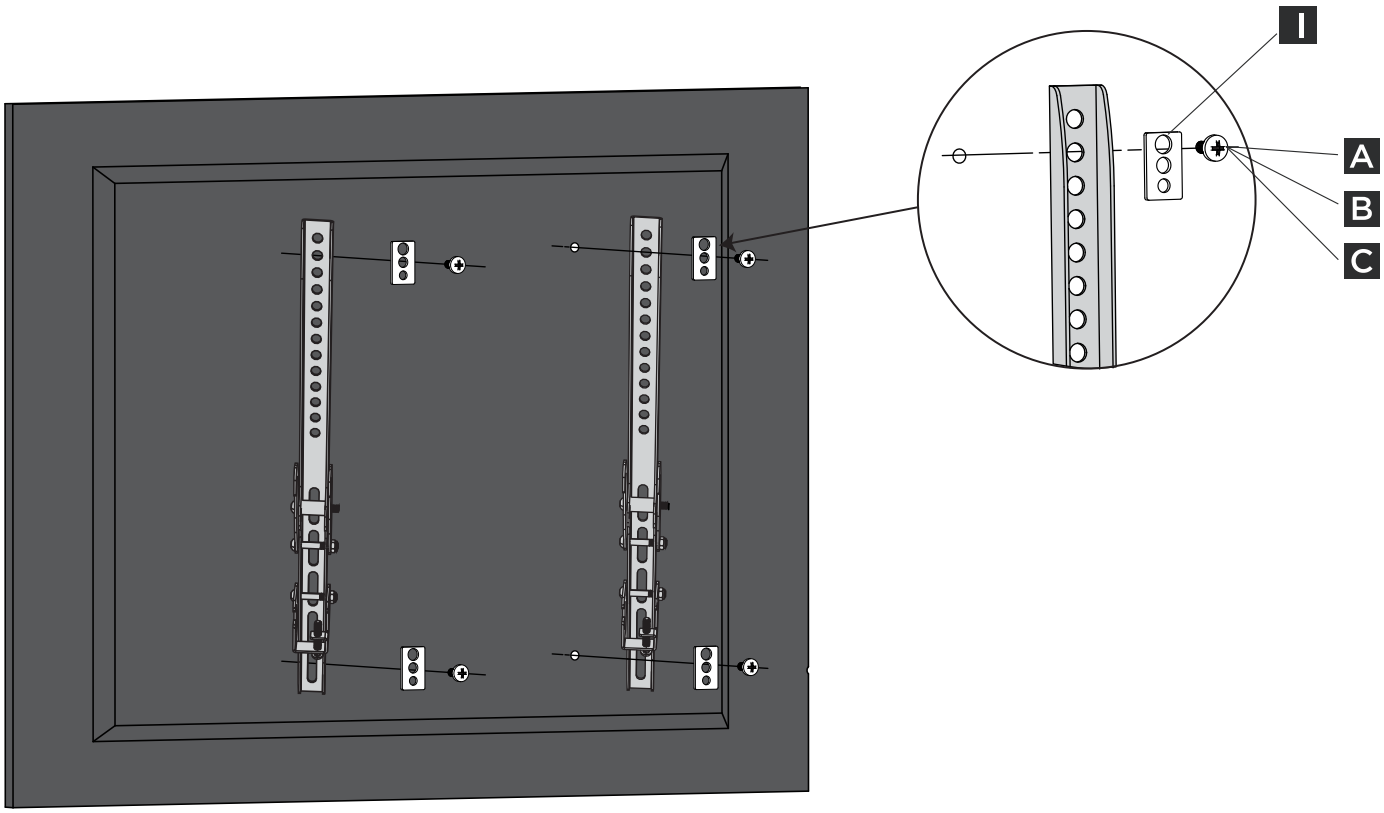

Attach Brackets to TV with Curved Back

STEP 1B: For Televisions with a Curved Back or Obstruction

1. Determine which screw diameter to use by hand threading screws into the proper inserts on the back of your television. Verify that the screw is a good fit, not too short or too long.

Parts Needed								
Square Washer	TV Spacer	Pick Best Fit for your TV	M5x35mm		M6x35mm		M8x35mm	
				OR		OR		
I (x4)	K (x4)		D (x4)		E (x4)		F (x4)	

2. Place TV brackets over your television hole pattern. Attach using appropriate screw, TV spacer, and square washer combination for your TV.

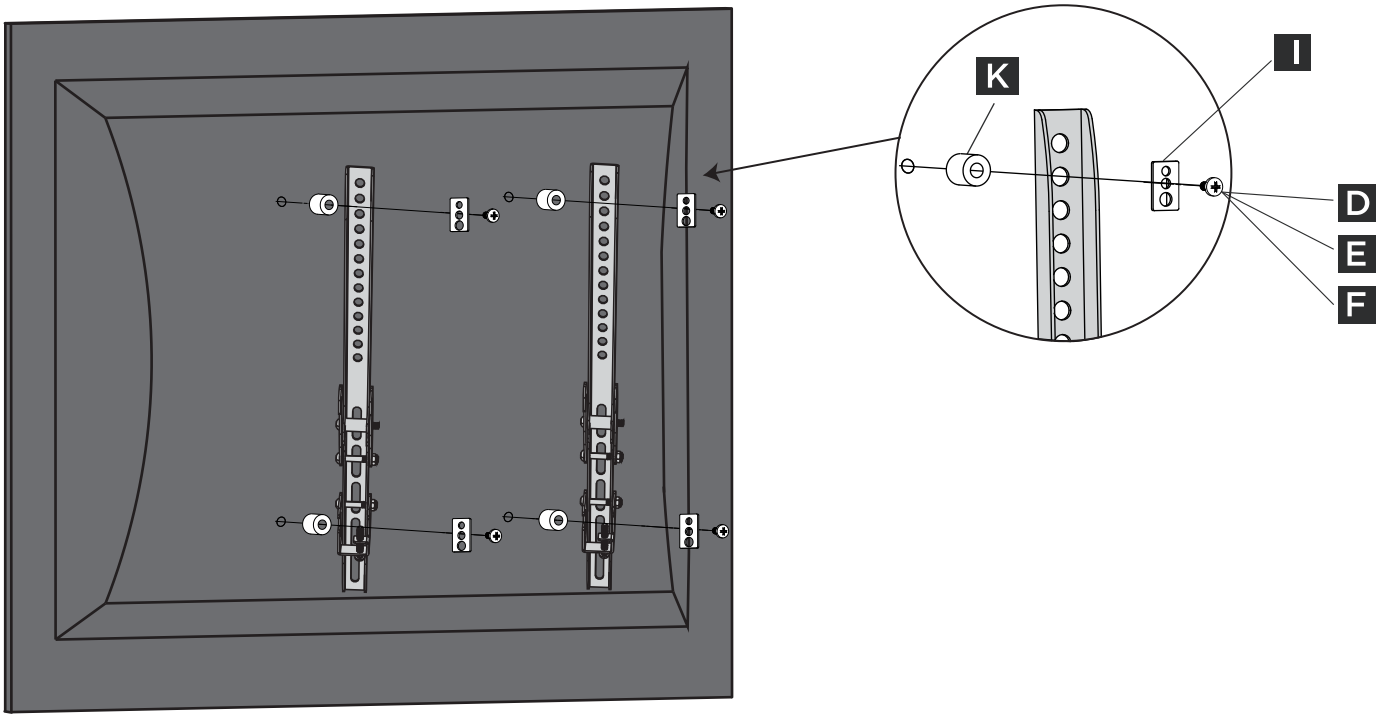

Final Installation & Adjustments

STEP 3: Lock Television into Wall Mount

1. Lock your television into place by attaching the TV brackets to the TV wall mount mount as shown below.

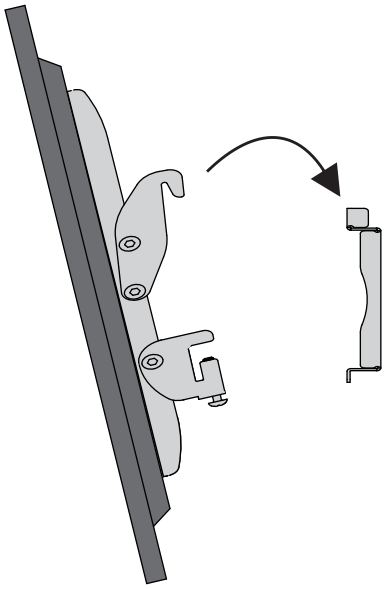

2. Rotate your TV to desired viewing angle. Secure your TV by using a screwdriver to lock it into place.

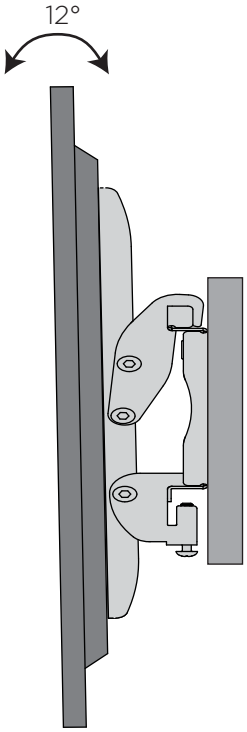

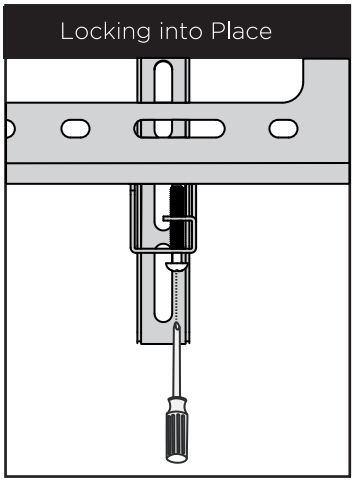

Visit **ematic.us/support** for customer support regarding your mount. To submit a request, fill out the required information online. You will be provided a ticket number regarding your issue which you can refer to when contacting us further.